CS-PT1100W-1 Series Pressure Transmitter

Product Features

- Ceramic piezo-resistive sensing element
- Measuring range: 0~5...50bar Gauge
- Accuracy: $\pm 1.0\%$ F.S
- Output: 4~20mA
- Electrical connection: GX12
- Pressure connection: G1/4
- Antiwater hammer effect
- High accuracy and high cost performance
- Suitable for mass production

Applications

- General pressure measurement
- Water treatment system
- Machinery manufacturing
- Measurement and control technology
- Hydraulic and pneumatic technology

Product Description

Designed for general industrial application, CS-PT1100W-1 series pressure transmitters feature compact structure, stable quality and high cost performance.

CS-PT1100W-1series pressure transmitters are widely used in water treatment industry. We can supply you in short term products with different pressure units and pressure connections to meet your specific applications.


Performance Parameters

Temperature: 25℃, Power: 12VDC, RH: 45%~75%, Atmospheric pressure: 86KPa~106KPa

Pressure Range	0~550bar Gauge	
Output Signal	4~20mA	
Power supply (U+)	10~30VDC	
Output Load	$\leq (U+-10) / 0.023 \Omega (MAX: 600 \Omega)$	
Over Voltage	30VDC	
Reverse Voltage	-30VDC	
Accuracy at Room Temperature	±1.0% F.S.	
Medium Temperature	-30°C~120°C	

Ambient Temperature	-20°C~85°C		
Storage Temperature	-40°C∼100°C		
Long-term Stability	±0.5%F.S / year		
Settling Time	$(10\% \sim 90\%) \le 10$ ms		
Overload Pressure	≥150%F.S		
Burst Pressure	≥ 200%F.S		
Pressure Connection	G1/4		
Electrical Connection	GX12		
Insulation Resistance	$\geq 100 M\Omega @ 100 VDC$		
Insulate Intensity	100VDC@60S, no arc or breakdown		
Vibration Resistance	10g, 5~2000Hz		
Shock Resistance	20g, 11ms half sine		
Ingress Protection	\geq IP65		
Sealings Materialsfor Wetted Part	NBR		
Housing Material	SS304		

Structures and Dimensions

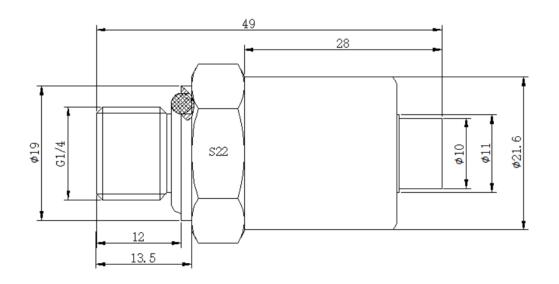

Wiring Definition

GX12	Pin	Definition
	1	Power Supply+ (U+)
$\left(\begin{array}{c} 2 \bullet \bullet_1 \\ \bullet_3 \end{array} \right)$	2	Current Output (Io)
	3	Shield (PE)

Notice:

a. The pressure transmitter must be used in the medium that is non-corrosive to the seal material and the housing material.

b. In case the pressure guiding hole of the transmitter is blocked, it is forbidden to use sharp tools to clear it. Instead, one should remove the transmitter from the system, immerse the pressure guiding hole part in the liquid which can dissolve the blockage, and then the blockage will flow out easily.

c. It's prohibited to open the transmitter by users for calibration or repair.

d. Please contact us if you're not sure whether the transmitter is suitable for the medium to be measured.

e. The transmitter should be installed in a location that is not easily bumped or stepped on.

f. Exceeding of the transmitter overload pressure may cause permanent damage.

g. Where lightning may occur, customers should consider lightning protection measures.