# **CS-PT1100V Series Pressure Transmitter**

#### **Product Features**

• Ceramic piezo-resistive sensing element

• Measuring range: 0~5...50bar Gauge

• Accuracy:  $\pm 1.0\%$  F.S

• Output: 0.5-4.5V

• Electrical connection: Packard Metri-Pack

• Pressure connection: G1/4

• High accuracy and high cost performance

• Suitable for mass production

### **Applications**

- General pressure measurement
- Air compressor
- Machinery manufacturing
- Measurement and control technology
- Hydraulic and pneumatic technology

# **Product Description**

Designed for general industrial application, CS-PT1100V series pressure transmitters feature compact structure, stable quality and high cost performance.

CS-PT1100V series pressure transmitters are widely used in air compressor industry. We can supply you in short term products with different pressure units and pressure connections to meet your specific applications.


#### **Performance Parameters**

Temperature: 25°C, Power: 5VDC, RH: 45%~75%, Atmospheric pressure: 86KPa∼106KPa

Pressure Range	0~550bar Gauge	
Output Signal	0.5-4.5V	
Power supply (U+)	5VDC	
Output Load	≥10kΩ	
Over Voltage	5.5VDC	
Accuracy at Room Temperature	±1.0% F.S.	
Medium Temperature	-30°C~120°C	
Ambient Temperature	-20°C~85°C	
Storage Temperature	-40°C~100°C	

Long-term Stability	±0.5% F.S / year		
Settling Time	(10%~90%)≤10ms		
Overload Pressure	≥ 150%F.S		
Burst Pressure	≥ 200% F.S		
<b>Pressure Connection</b>	G1/4		
<b>Electrical Connection</b>	Packard Metri-Pack		
Insulation Resistance	≥ 100MΩ@100VDC		
Insulate Intensity	100VDC@60S, no arc or breakdown		
Vibration Resistance	10g, 5~2000Hz		
Shock Resistance	20g, 11ms half sine		
Ingress Protection	≥ IP65		
Sealings Materialsfor Wetted Part	NBR		
Housing Material	SS304		

# **Structures and Dimensions**

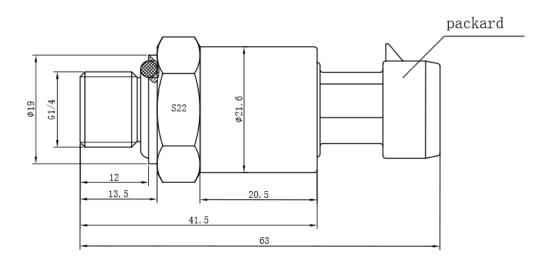

# **Wiring Definition**

Packard Metri-Pack	Pin	Definition
	A	GND
A B	В	Power Supply+ (U+)
	С	Voltage Output (Vo)

#### Notice:

- a. The pressure transmitter must be used in the medium that is non-corrosive to the seal material and the housing material.
- b. In case the pressure guiding hole of the transmitter is blocked, it is forbidden to use sharp tools to clear it. Instead, one should remove the transmitter from the system, immerse the pressure guiding hole part in the liquid which can dissolve the blockage, and then the blockage will flow out easily.
- c. It's prohibited to open the transmitter by users for calibration or repair.
- d. Please contact us if you're not sure whether the transmitter is suitable for the medium to be measured.
- e. The transmitter should be installed in a location that is not easily bumped or stepped on.
- f. Exceeding of the transmitter overload pressure may cause permanent damage.
- g. Where lightning may occur, customers should consider lightning protection measures.